

1    **14 Management entities**

2    **14.1 Introduction**

3    **14.2 Branch 0xDA “identification”**

4    **14.3 Branch 0x07 “basic attributes”**

5    **14.4 Branch 0xDB “extended attributes”**

6    This subclause lists extended management attributes, which are not part of the definitions in  
7    IEEE Std 802.3, Clause 30. The extended attributes shown in Table 14-55 shall be supported.

8    The extended attributes can be part of *eOAM\_Get\_Request*, *eOAM\_Get\_Response*, *eOAM\_Set\_Request*,  
9    and *eOAM\_Set\_Response* eOAMPDUs.

10    **Table 14-55—Extended attributes defined in branch 0xDB**

Leaf	Attribute	Defined in
<b>&lt;all rows above are unchanged&gt;</b>		
<b>Object group: Encryption</b>		
0x04- <u>0401</u>	aEncryptionMode	14.4.5.1
<u>0x04-02</u>	<u>aPassphrase</u>	<u>14.4.5.2</u>
<b>Object group: Frame processing</b>		
0x05-01	aRuleSetConfig	14.4.6.1
0x05-02	aRuleCustomField	14.4.6.2
0x05-03	aRuleTpIdCAlter	14.4.6.3
0x05-04	aRuleTpIdSAlter	14.4.6.4
0x05-06	aRuleTpIdIAAlter	14.4.6.6
0x05-07	aRuleTpIdBAAlter	14.4.6.7
<b>Object group: Service-level agreements</b>		
0x06-01	aRateLimitBroadcast	14.4.7.1
0x06-04	aQueueCIR	14.4.7.2
0x06-06	aQueueEIR	14.4.7.3
0x06-07	aQueueColorMarking	14.4.7.4
0x06-08	aQueueRateLimiterCap	14.4.7.5
0x06-09	aCouplingFlag	14.4.7.6
<b>Object group: Clock transport</b>		
0x07-01	aClockTranspCapab	14.4.10.1
0x07-02	aClockTranspStatus	14.4.10.2
0x07-03	aClockTranspTransfer	14.4.10.3
0x07-04	aClockTranspPropagParam	14.4.10.4
0x07-05	aClockTranspRtt	14.4.10.5
<u>0x08-00</u>	<u>Reserved, ignored on reception</u>	
<u>0x08-01</u>	<u>Reserved, ignored on reception</u>	
<u>0x08-02</u>	<u>Reserved, ignored on reception</u>	
<u>0x08-03</u>	<u>Reserved, ignored on reception</u>	
<b>Object group: UNI management</b>		
<b>&lt;all rows below are unchanged&gt;</b>		

1 All other Leaf values are reserved and ignored on reception.

## 2      14.4.1 ONU management

### 3 14.4.2 Bridging

#### 4 14.4.3 Statistics and counters

## 5 14.4.4 Alarms

## 6 14.4.5 Encryption

#### 7 14.4.5.1 Attribute *aEncryptionMode* (0xDB/0x04-0401)

8 This attribute represents the current encryption mode configured on the given ONU. This attribute applies  
9 to the encryption entity associated with the ONU object and it only affects the ONU's encryption of the  
10 upstream traffic.

11 Attribute *aEncryptionMode*:

## Syntax: Enumeration

**Default value:** normal

**Remote access:** Read/Write

**Description:** This attribute indicates the current encryption mode configured on the ONU.

The following values are defined:

**normal:** upstream encryption is enabled if the downstream unicast traffic to this ONU is encrypted.

`force_on`: upstream encryption is enabled regardless of the status of the downstream encryption.

`force_off`: upstream encryption is disabled regardless of the status of the downstream encryption.

23 NOTE— This attribute is intended mainly for testing and troubleshooting. Under the normal operating  
24 conditions, this attribute is expected to retain its default value (see 11.9).

25 The *aEncryptionMode* attribute is associated with the ONU object (see 14.2.1). The Variable Container  
26 TLV for the *aEncryptionMode* attribute shall be as specified in Table 14-157.

**Table 14-157—Encryption Mode TLV (0xDB/0x04-0401)**

Size (octets)	Field (name)	Value	Notes
1	Branch	0xDB	Branch identifier
2	Leaf	0x04- <b>0401</b>	Leaf identifier
1	Length	0x01	The size of TLV fields following the Length field
1	EncryptionMode	Varies	<p>Value of <i>aEncryptionMode</i> attribute, defined as follows:</p> <ul style="list-style-type: none"> <li>normal: 0x00</li> <li>force_on: 0x01</li> <li>force_off: 0x02</li> </ul>

1    **14.4.5.2 Attribute aPassphrase (0xDB/0x0402)**

2    This attribute represents the activation passphrase that is configured into the ONU. The passphrase may be  
3    queried during the ONU onboarding procedure (see [14.6.5.2.1](#)).

4    The ONU prompts the user/installer to enter the passphrase when it receives the *Passphrase Prompt TLV*  
5    (see [14.6.5.3](#)). The method of displaying the prompt to the user and inputting the passphrase value is  
6    vendor-specific and outside the scope of this standard.

7    Attribute aPassphrase:

8    Syntax:      String

9    Size (octets): 32 (max)

10   Default value: null-string (terminating character)

11   Remote access: Read-Only

12   Description:     This attribute represents the activation passphrase entered by user/installer into  
13       the ONU. The ONU shall reset the passphrase value to its default upon reception  
14       of *Passphrase Prompt TLV* (see [14.6.5.3](#)).

15   The *aPassphrase* attribute is associated with the ONU object (see 14.2.1). The Variable Container TLV for  
16       the *aPassphrase* attribute shall be as specified in Table 14-xxx.

17                    **Table 14-xxx—Passphrase TLV (0xDB/0x04-01)**

<u>Size (octets)</u>	<u>Field (name)</u>	<u>Value</u>	<u>Notes</u>
1	Branch	0xDB	Branch identifier
2	Leaf	0x04-02	Leaf identifier
1	Length	Varies	The size of TLV fields following the Length field
Varies	Passphrase	Varies	Value of <i>aPassphrase</i> attribute

18

19    **14.5 Branch 0x09 “basic actions”**

20    **14.6 Branch 0xDD “extended actions”**

21   This subclause specifies a set of extended management actions used by the OLT to enforce a specific  
22   behavior in the ONU. The extended management actions shown in [Table 14-3](#)[Table 14-205](#) shall be  
23   supported.

24                    **Table 14-3205—Extended actions defined in branch 0xDD**

Leaf	Attribute	Defined in
<b>&lt;all rows above are unchanged&gt;</b>		
<b>Object group: Encryption</b>		
0x04-01	acConfigEnqrKey	14.6.5.1
0x04-02	acSyncCipherClock	14.6.5.2
0x04-03	acPassphrasePrompt	14.6.5.3
<b>Object group: Frame processing</b>		
<b>&lt;all rows below are unchanged&gt;</b>		

25   All other Leaf values are reserved and ignored on reception.

1	<b>14.6.1 ONU management</b>
2	<b>14.6.2 Bridging</b>
3	<b>14.6.3 Statistics and counters</b>
4	<b>14.6.4 Alarms</b>
5	<b>14.6.5 Encryption</b>
6	<b>14.6.5.1 Action <i>acConfigEnrKey</i> (0xDD/0x04-01)</b>
7	<b>14.6.5.2 Action <i>acSyncCipherClock</i> (0xDD/0x04-02)</b>
8	<b><u>14.6.5.3 Action <i>acPassphrasePrompt</i> (0xDD/0x04-03)</u></b>
9	This action is used by the NMS to prompt the user or ONU installer to enter a passphrase during the ONU onboarding procedure. The method of displaying the prompt to the user and inputting the passphrase value is vendor-specific and outside the scope of this standard.
10	
11	
12	<u>Attribute <i>acPassphrasePrompt</i>:</u>
13	<u>Syntax:</u> String
14	<u>Size (octets):</u> 128 (max)
15	<u>Remote access:</u> Write-Only
16	<u>Description:</u> This attribute represents the prompt to be displayed to the user. The action of writing of any value into the <i>aPassphrasePrompt</i> attribute also resets the value of the <i>aPassphrase</i> attribute to its default (see <a href="#">14.4.5.2</a> ).
17	
18	
19	The <i>acPassphrasePrompt</i> action is associated with the ONU object (see <a href="#">14.2.1</a> ). The Variable Container TLV for the <i>acPassphrasePrompt</i> action shall be as specified in <a href="#">Table 14-xxx</a> .
20	
21	<b><u>Table 14-xxx—Passphrase Prompt TLV (0xDD/0x04-01)</u></b>
22	
23	

<u>Size (octets)</u>	<u>Field name</u>	<u>Value</u>	<u>Notes</u>
1	<u>Branch</u>	<u>0xDD</u>	<u>Branch identifier</u>
2	<u>Leaf</u>	<u>0x04-03</u>	<u>Leaf identifier</u>
1	<u>Length</u>	<u>Varies</u>	<u>The size of TLV fields following the Length field.</u>
Varies	<u>PassphrasePrompt</u>	<u>Varies</u>	<u>Value of <i>acPassphrasePrompt</i> attribute.</u>