102. EPo	C PHY Link	1 2
102.1 PH	Y Link overview and architecture	3 4
102.2 Dov	wnstream PHY Link	5
102.2.1 DS	S PHY Link physical layer	7 8
102.2.2 DS	S preamble	9 10
102.2.3 DS	G frame	11 12
102.2.4 DS	S PHY Link FEC	13 14 15
102.2.5 DS	S State Diagrams	15 16 17
102.2.5.1	Constants	18 19
EPFHtp	TYPE: integer This value represents the PHY Link message type for the EPoC PHY Frame Header message block VALUE: 0x0A	20 21 22 23 24 25
FPMBtp	TYPE: integer This value represents the PHY Link message type for the FEC Parity message block VALUE: 0x0C	26 27 28 29
MaxFmL	TYPE: integer This constant represents the maximum number of bits, excluding the preamble, the PHY Link can transmit in a single frame. VALUE: TBD	30 31 32 33 34
MaxMBL	Len Carte Ca	35 36
	TYPE: integer This constant represents the maximum number of bits in the downstream PHY Link frame minus the length of the FEC Pointer message block and excluding FEC Parity. VALUE: 2824	37 38 39 40
TMBtp	TYPE: integer This value represents the PHY Link message type for the the Timestamp message block VALUE: 0x09	41 42 43 44 45
102.2.5.2	Counters	46 47
TmStmp	TYPE: 32 bit unsigned This counter holds the value of the local Timestamp. The counter is advanced by the OFDM clock (1/204.8) and rolls over to zero from 0xFFFFFFFF. At the CLT the counter shall track the transmit clock, while at the CNU the counter shall track the receive clock. For accuracy of receive clock are (xsf.) Changing the value of this variable while running using Layer Man.	48 49 50 51 52 53

receive clock, see {ref}. Changing the value of this variable while running using Layer Man-

54

	agement is highly undesirable and is unspecified. TYPE: 32 bit unsigned
102.2.5.3 \	/ariables
BEGIN	
DEGIIV	TYPE: boolean
	This variable is used when initiating operation of the functional block state diagram. It is set to TRUE following initialization and every reset.
PhyDA	
Ž	TYPE: 15 bit unsigned integer This variable represents the CNU_ID of the intended recipient of the EPoC message blocks included in the PHY Link frame.
DS_CID	
	TYPE: 2 bit unsigend integer This variable represents the downstream Configuration ID value as described in 102.2.3.1.1.
FmLen	
	TYPE: integer This variable represents the total number of bits transmitted in the current PHY Link frame.
PhyTD	
	TYPE:bit array This variable represents a bit array corresponding to data to be sent over the PHY Link. This variable is used to accumulate payload of outgoing PHY Link message blocks, for example to set the Timetamp Message BLock.
RF_ID	
	TYPE: 8 bit integer This variable represents the Response Frame ID as described in 102.2.3.1.1.
RT	
	TYPE: boolean This variable represents the Response Type as described in 102.2.3.1.1.
StrtOfFm	TWDE 1 1
	TYPE: boolean Whne this variable transitions from FALSE to TRUE it indicates the beginning of an OFDM frame.
TxEnable	
	TYPE: boolean This variable enables the device to transmit onto the media when TRUE. It is set to FALSE following initialization and every reset.
PhyTxFII	GO.
<i>y</i> = 	TYPE: bit array
	This variable holds a series of PHY Instructions to be transmitted in the next PHY frame. Each entry in the fifo includes Opcode, Count, Variable Group Index and Data fields for each instruction.
TxPre	
	TYPE: boolean When TRUE this variable indicates the PHY Link should be sending the preamble pattern as defined in 102.2.2.
US_CID	
	TYPE: 2 bit integer
	This variable represents the upstream Configuration ID value as described in 102.2.3.1.1.

102.2.5.4 Functions			
CRC32(x)	This function returns a 32 bit CRC of the bit array n (See 3.2.9).		
POP()	This function removes one record from the PhyTxFIFO.		
PUSH()	This function returns one record from the PhyTxFIFO		
102.2.5.5 Timers			
102.2.5.6 Messages			
102.2.5.7 State diagrams			
102.2.3.7	nate diagrams		

1 2

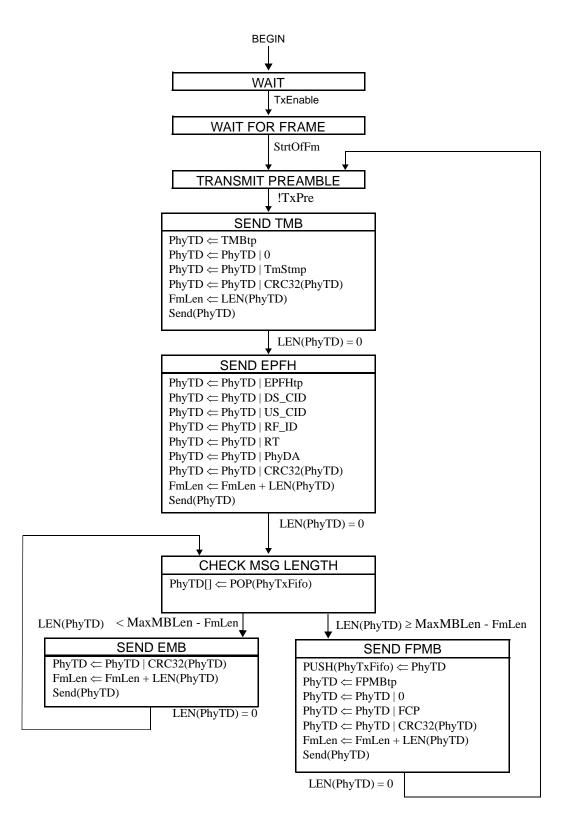


Figure 102-1—CLT PHY Link transmission control state diagram