



**Residential Ethernet:
Time-of-day timer synchronization**

Maintained by David V James

July 2005

IEEE 802.3 RE Study Group
San Francisco

1

This is an RE slide set, with many slides created by DVJ.
RE stands for “Residential Ethernet”, and 802.1 study group.

Alternative names abound, which mean the same thing:
Residential Bridges, Residential Bridging
AV Bridges, Audio/Visual Bridges, etc.

Credit is due to many others, whose reviews/comments evolved this concept.

RE-SG basic requirements

- Cheap and simple
 - Delayed snapshots, periodic symmetric transmissions
 - Periodic symmetric transmissions
- Cheap and precise
 - Limited to snapshot capture accuracy
 - Minimal grand-master handover transients
- Cheap and robust
 - Single-phase grand-master selection
- Cheap and responsive
 - Short rogue-frame lifetimes

July 2005

IEEE 802.3 RE Study Group
San Francisco

2

The main consideration is to be cheap:
Easily integrated into consumer bridges.
Easily integrated into consumer end-points.

Simplicity is valued, since fewer mistakes are likely to be made.
Delayed snapshots avoid time-critical processing requirements
Symmetric processing reduces process-sequence steps


Precision is valued, since audio-files are very sensitive
ps jitter desired, although theoretical and filtered is probably OK
Minimal-glitch handovers due to accurate/symmetric compensations

Robustness is also critical, with minimal-glitch handovers.

Is this realistic? Fortunately, we can benefit from existing IEEE 1588 knowledge.
without its legacy constraints (e.g., broadcast CSMA/CD).

Cascaded TOD synchronization

Wall-clock distribution model

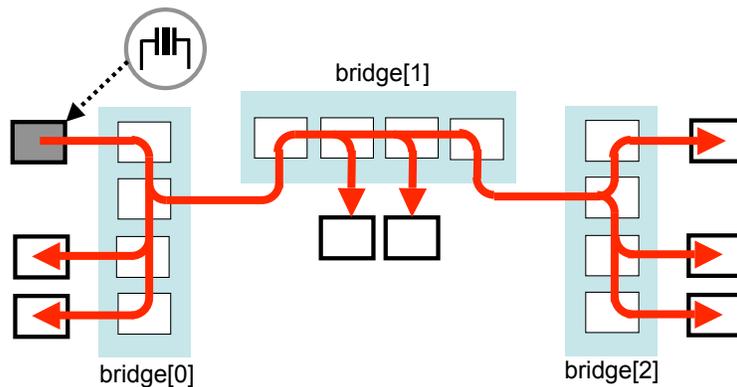

July 2005

IEEE 802.3 RE Study Group
San Francisco

3

The clock-distribution scheme is that of IEEE 1588.

The grand clock master (grand master) is the station whose time-of-day clock is the reference.

From a logical perspective, the clock master broadcasts the current time-of-day to the attached stations.


From a physical perspective, such a multicast time distribution would be inaccurate:

- 1) There may be source transmission delays.
- 2) There may be bridge forwarding delays.

Therefore, a more-precise synchronization protocols is used.

Cascaded TOD synchronization

Cascaded adjacent-synchronization hierarchy

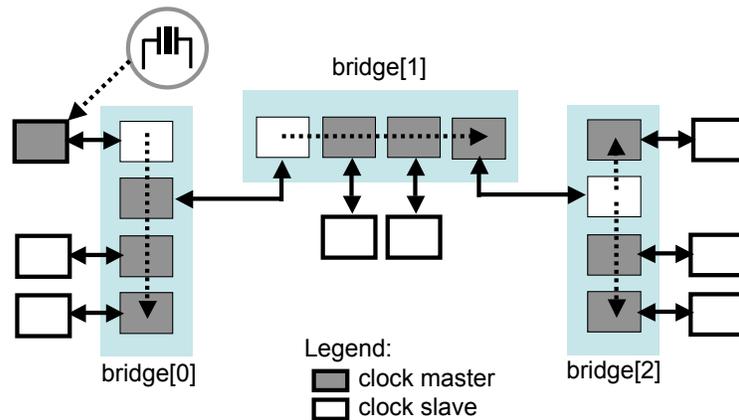

July 2005

IEEE 802.3 RE Study Group
San Francisco

4

To avoid propagation-time inaccuracies:

- Synchronization is done on a point-to-point basis

- Internal bridge distribution (port-to-port) is “magical” and beyond our scope.


A key point: its no enough to standardize how one identifies slave errors:

- One must address how the slave eliminates errors.

- One must address how cascaded slaves compensate cumulative errors.

Adjacent-station synchronization

Offset value adjustments

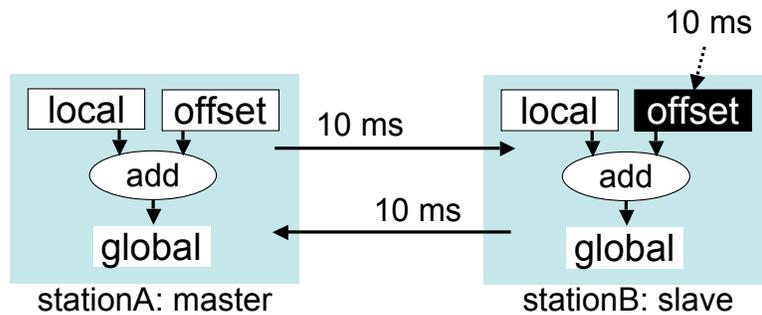

July 2005

IEEE 802.3 RE Study Group
San Francisco

5

Initial studies indicate a faster update rate is practical.

While 1ms is practical, a slower 10ms allows the cheapest of microprocessors.


The primary purposes of these transfers are for:

- Grand-master selection (reduces rogue frame stabilization times)

- Offset adjustments, to force current time acceptance

(For precise synchronization, rate adjustments may also be required.)

Minimalist HW design model

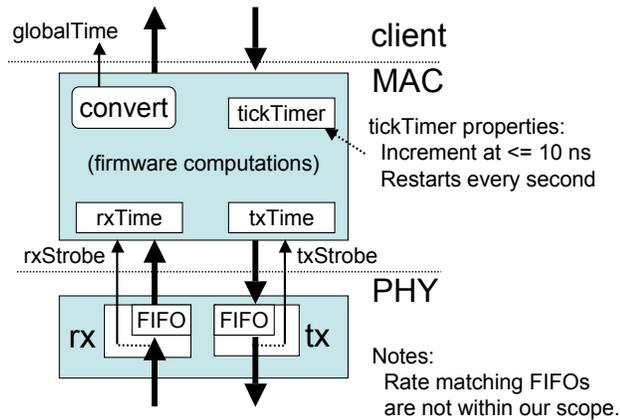

July 2005

IEEE 802.3 RE Study Group
San Francisco

7

What is the hardware design model?

Simple hardware to snapshot the arrival/departure times

The local time reference (a minimum frequency is sufficient) is OK.

External communications are through normalized time values.

Firmware performs the conversions, frame formatting, etc.


Several strategies for precise snapshots are possible:

FIFOs add ambiguity (existing hardware)

The MAC arranges for FIFOs to be nearly empty, at critical times

The PHY signals the actual clockSync arrival/departure times

Uncompromised precision

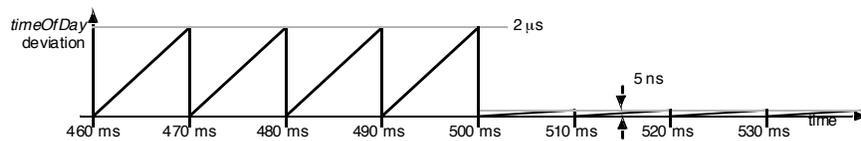

July 2005

IEEE 802.3 RE Study Group
San Francisco

8


With a 200PPM clock deviation, offset adjustments have limitations. The problem is the drifts, due to clock-frequency differences. Thus, the most apparent solution is to have the “slave” match the rate of the master.

Frequency deviations are easily measured, from time snapshots measured over a larger time interval (100ms, perhaps).

Various frequency compensation schemes are possible; the above waveform illustrates one possible scheme.

Grand-master selection protocol

Grand-master precedence comparisons

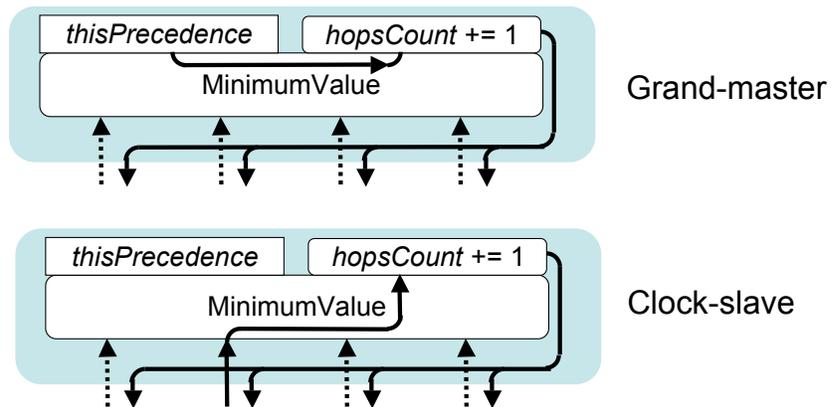


July 2005

IEEE 802.3 RE Study Group
San Francisco

9

For the grand-master selection, spanning-tree protocol is popular in 802.1. The “minimum” value is distributed throughout the network. A hopCount value breaks ties, in favor of the shortest-span lengths.

Grand-master precedence

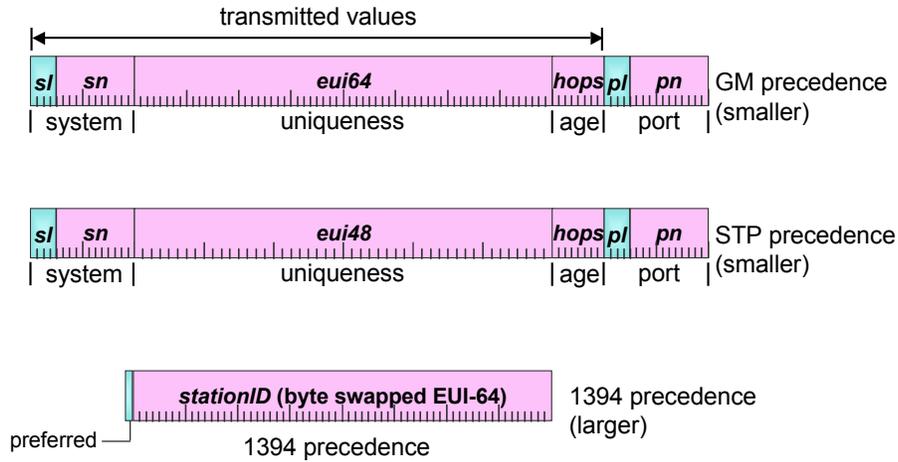

July 2005

IEEE 802.3 RE Study Group
San Francisco

10

What is the precedence value?

The 802.1 spanning-tree protocol assumes “smart” things set the precedence, “simple” things do the comparisons.

The precedence numbers must be unique, so that only one clock master will be selected. For this purpose, the station address is sufficient.

To communicate preferences, a *sp* (station priority) value is provided. This overrides the MAC address, allowing users to assert their preferences. This weighting can be accessed through the MIB.

For stations with equal *sp/systemID* values, the *stationId* becomes the tie breaker.

For stations with equal *systemTag/systemID* values, the *hops* becomes the tie breaker. This resolves grand-master in favor of smallest hops


For ports on a bridge, the *portLevel* (*pl*) and *portNumber* (*pn*) are similarly used as tie breakers that select between available ports. This resolves same-hops messages on the basis of the arrival ports.

The lowest numerical value has the highest precedence.

Default weighting is the largest numerical value.

The setting of lower-valued weights is a higher level protocols and is beyond the scope of this standard.

Timing specifics...

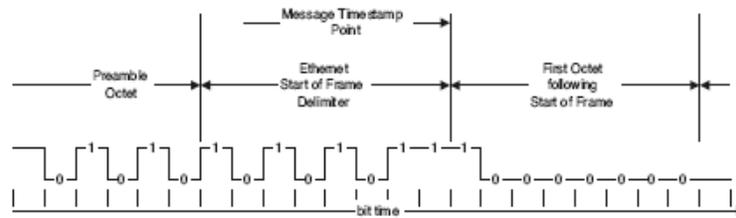

(from IEEE 1588-2002, subclause D.1.1, page 127)

July 2005

IEEE 802.3 RE Study Group
San Francisco

11

What (exactly) is the frame arrival/departure time?

Depends on the physical layer details.

Some are already specified, in IEEE 1588.

Parallel-bit transmission schemes may need clarifications.

1G CAT-5

10G (in general?)

Timer offset compensation

Compute nearest neighbor errors

- Based on adjacent timer information
- Cumulative values are computed
 - Offsets are added in a cascaded fashion
- The grand-master “timer” can be set/adjusted
 - How-to details are beyond our scope
 - The actual value is accumulated, like other offsets
- Responsive to grand-master changes
 - Each receive port offset is constantly computed
 - Handover calibration is thus “precomputed”

July 2005

IEEE 802.3 RE Study Group
San Francisco

12

Timer synchronization involves:

offset-time adjustments, 10 ms for short-term coarse-grained tracking
offset-rate adjustments, 100 ms for long-term fine-grained tracking


Only the offset-time offset adjustments are illustrated.

offset-rate adjustments are performed in a similar fashion

In general, timers are never reset or changed

offset values are added, these can be changed

Adjacent offset computation

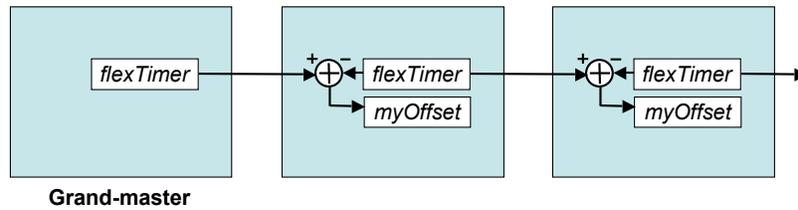

July 2005

IEEE 802.3 RE Study Group
San Francisco


13

Adjacent station offset computations involve periodic duplex exchanges.

The *flexTimer* value is a fixed-rate timer, with identical nominal rates.
In reality, may be any convenient HW timer, with firmware conversions.

Based on neighbor interchanges, the neighbor differences are computed.

Cumulative offset computation

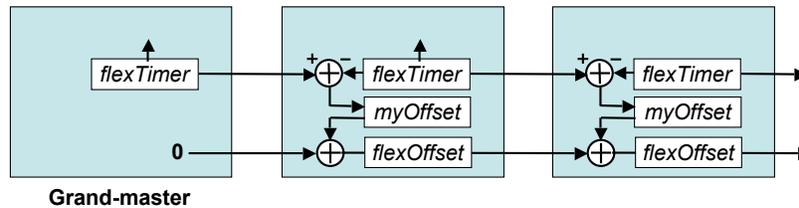

July 2005

IEEE 802.3 RE Study Group
San Francisco

14


The adjacent-neighbor offsets are accumulated downstream.

Thereafter, each station's *flexOffset* value accurately represents the offset from the grand-master, rather than one's adjacent neighbor.

While oftentimes illustrated separately, both are done concurrently:

- Compute the next value of *myOffset*
- Accumulate the cumulative *flexOffset* values

Adjusted timeOfDay values

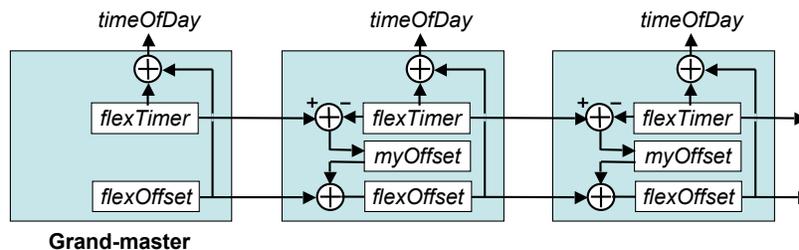

July 2005

IEEE 802.3 RE Study Group
San Francisco


15

Cumulative offset values allow the slaves to track the grand-master.
However, the grand-master's time may be set incorrectly.

Changing the grand-master's *flexTimer* would have bad consequences,
causing potentially large discontinuities in *myOffset* values.

Instead, a distinct *flexOffset* value is distributed.
While the time discontinuity is unavoidable, the computed *myOffset* values
are undisturbed by the transient.

Seamless grand-master handover

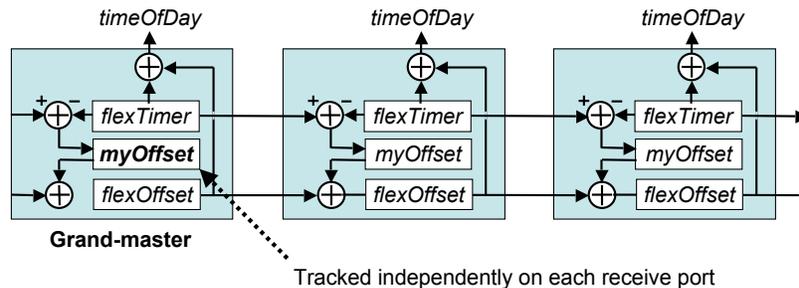

July 2005

IEEE 802.3 RE Study Group
San Francisco

16

What if the grand-master changes?

This could be by:

- another station being added
- a grand-master preference being changed

Or, the path from the grand-master could be changed.

To reduce such transient effects, the grand-master monitors receive ports. Its receive port independently/constantly computes *myOffset* values.

When a handover occurs, the nearly correct *myOffset* value is available, so *flexOffset* discontinuities are minimal.

This assumes the new grand-master maintained synchronization by:

- Participating (as a clock-slave station) in synchronization protocols.
- Maintaining synchronization through other means (e.g., radio station).
- Maintaining precise time through physical design (e.g., atomic clock).

**Backup slides for
Residential Ethernet:
Time-of-day timer synchronization**

Maintained by David V James


July 2005

IEEE 802.3 RE Study Group
San Francisco

17

Backup slides, for pre-review and-or extended question responses.

House reference clock

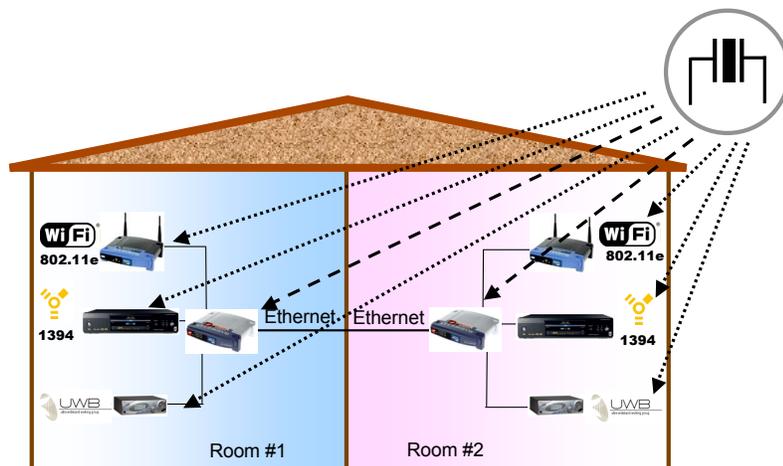

July 2005

IEEE 802.3 RE Study Group
San Francisco


18

In support of synchronous transfers, all RE devices are assumed to have the same impression of time.

For this presentation, assume an 8kHz cycle time, although a decision on this value has not been finalized.

Requirement: 8kHz cycle frequencies are locked and the “same

Precise time synchronization

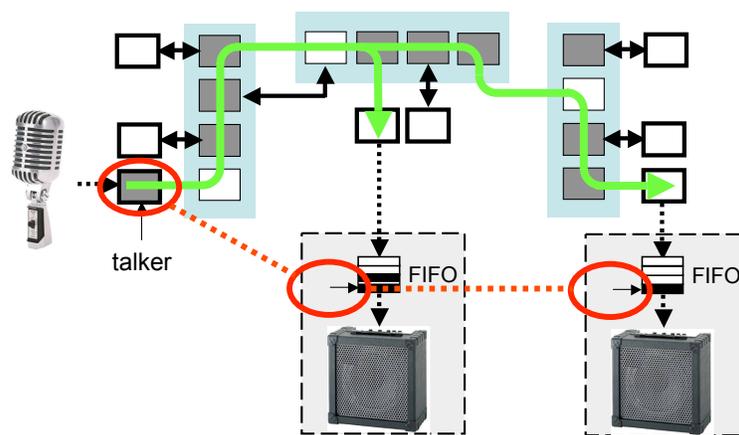

July 2005

IEEE 802.3 RE Study Group
San Francisco

19


Data arrives early; data is gated at its presentation time.
(Each frame has a presentation time stamp.)

Bridge reclocking has a relatively modest clock-sync accuracy requirement,
where microsecond deviations could be acceptable.

Source-data and presentation-data clocking requirements are more severe.

- 1) Frequency drift is unacceptable, since dropped/replicated values are audible.
- 2) Presentation time jitter is sub nanosecond, based on slew rates and D/A accuracies.

Adjustable *timeOfDay* timer

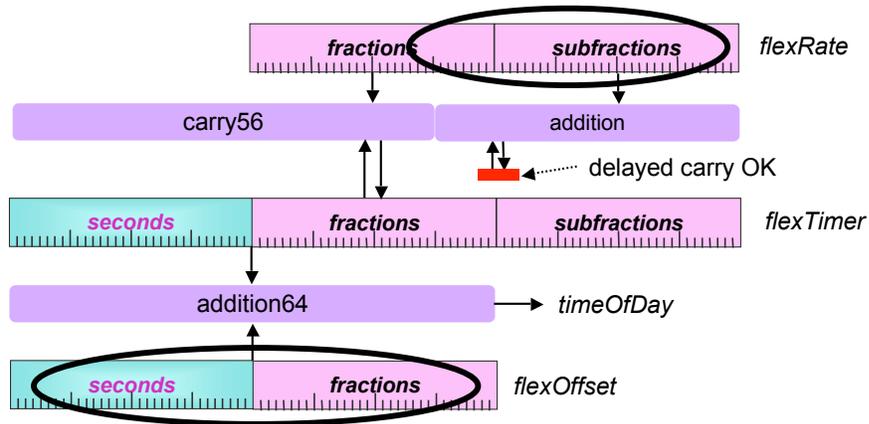

July 2005

IEEE 802.3 RE Study Group
San Francisco

20

The basic model assumes rate-adjustable and offset-adjustable clocks.
Since bridge values are rarely needed:
Any high-enough frequency clock is sufficient
Value can be converted "on-demand".

The rate can be adjusted, by updates to *flexRate*.

The offset can be adjusted, by changes to *flexOffset*.

How is a fractions-of-second timer conceptually implemented?

Clocks are typically multiples of something else!

The clock can tick at a natural rate, and the tick-size need-not be "one".


For example, consider a clock that is updated with a 16ns clock.

The update value is 68.719476736

Since the LSB is insignificant, the carry can be delayed

The less significant bits provide precise rate adjustment, for precise tracking

Time-of-day format options

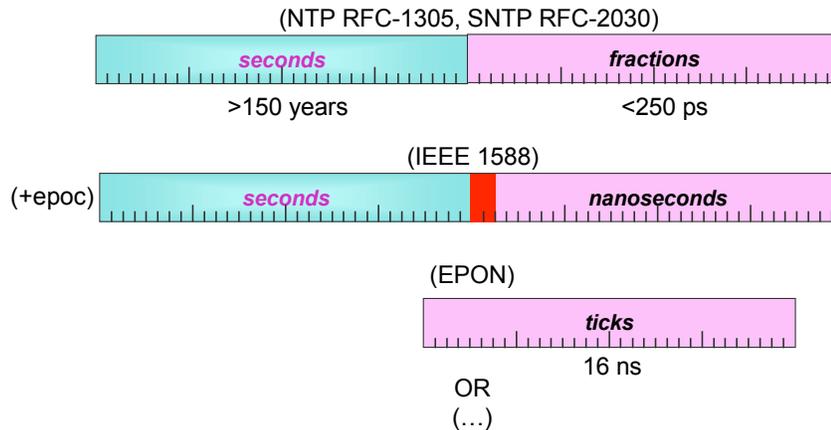

July 2005

IEEE 802.3 RE Study Group
San Francisco

21

What is synchronized?

Preferably a binary seconds and fractions-of-seconds value.

Doesn't overflow within our lifetimes.

Time resolution induced errors are insignificant.

Easily added and subtracted.

Readily converted to other formats...

Other formats are also possible:


because we have 10 fingers

a multiple of the cycle frequency

....

Adjacent-station synchronization

Differential rate adjustments

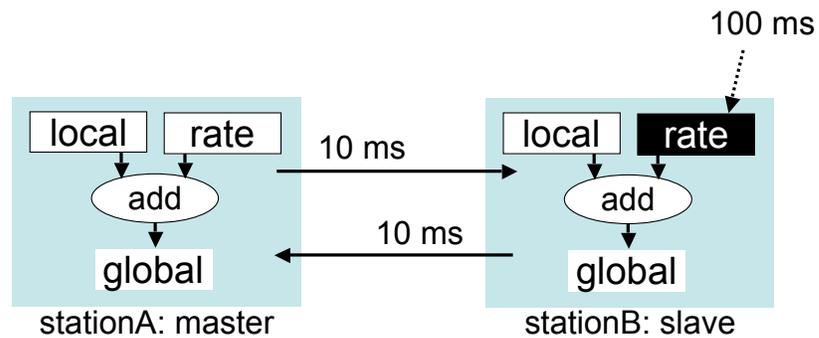

July 2005

IEEE 802.3 RE Study Group
San Francisco


22

Adjacent-station synchronization is preferably done less frequently, so that the time-snapshot errors are smaller.

For a 10x longer interval, the effective frequency error is nearly zero.

Yet, the sampling interval is small enough to compensate for modest time-varying temperature drifts.

Frame format

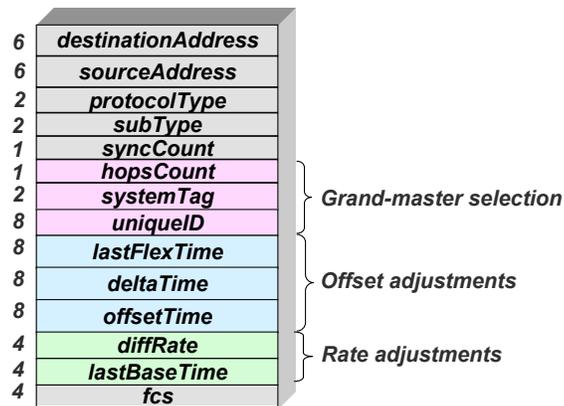

July 2005

IEEE 802.3 RE Study Group
San Francisco

23

What is contained within each frame?

The standard header.

A syncCount to detect missing frames, thus avoiding last-cycle sampling errors.

Values for the grand-master selection.

Values for the offset adjustments

Values for the rate adjustments


And, this all fits in a minimum-length 64-byte frame!

(Thus, there is no advantage to having "smaller" frames.)

Basic requirements

- KISS (keep it simple, stupid)
 - Delayed snapshot processing
 - Periodic symmetric transmissions
 - Etc., etc.
- NTP (RFC-1305) and SNTP (RFC-2030)
 - Definition of the 64-bit time-of-day value
- For a detailed summary, see:
 - <http://dvjames.com/esync>
 - [dvjTimeSync2005Dec12.pdf](#) (or later revision)

Template picture

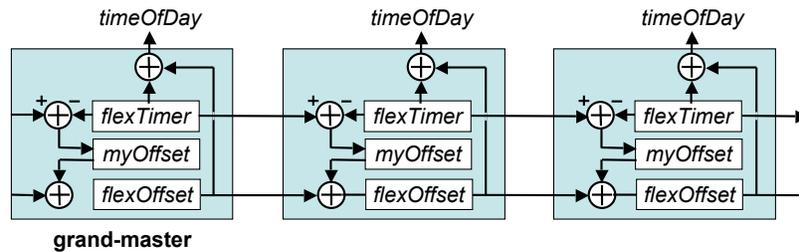

July 2005

IEEE 802.3 RE Study Group
San Francisco

25

What is the hardware design model?

Simple hardware to snapshot the arrival/departure times

The local time reference (a minimum frequency is sufficient) is OK.

External communications are through normalized time values.

Firmware performs the conversions, frame formatting, etc.

Several strategies for precise snapshots are possible:

FIFOs add ambiguity (existing hardware)

The MAC arranges for FIFOs to be nearly empty, at critical times

The PHY signals the actual clockSync arrival/departure times